



INSTALLATION STEPS:

Step 1

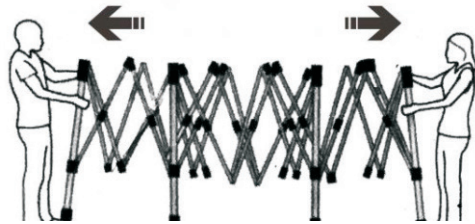


Select a smooth, level site for your tent. Begin with two people standing at diagonal corners of the structure, each holding a leg and one person remaining intact while the other steps backwards, pulling the frame apart until your arms are fully extended to 50% deployment.

Step 2

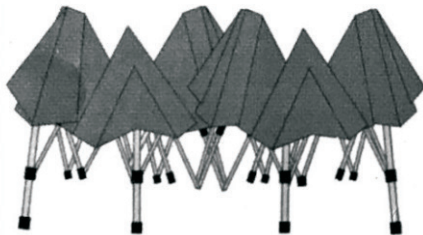


Unfold the roof, place roof over frame, align corner of roof over each frame leg top. Do not place your hands between frame tubes. Push up until roof is fully opened.

Step 3

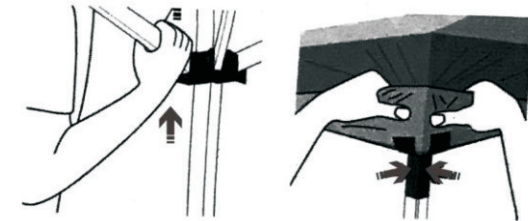

Make sure to put in pole underneath canopy fabric in the middle to create tent effect and before locking brackets in to place. Slide the corner brackets up until the button snaps into place. Pull corners down the snaps. Attach the Velcro fasteners onto the legs and trusses of the frame.


Step 4

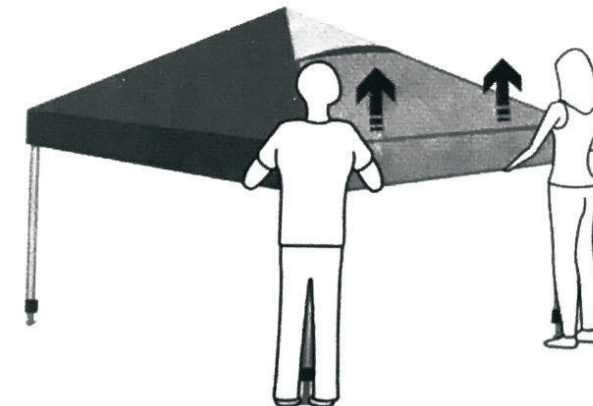

Slide legs up to the desired height, making sure buttons snap into place. The reverse order of the above installation steps should be followed to close the tent safely.


CLOSE STEP:

Step 1

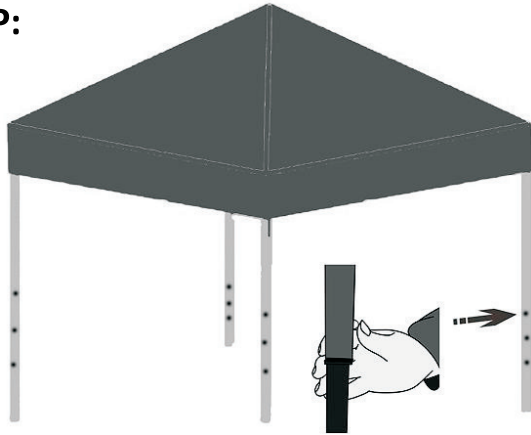


Release the buttons on all four legs and adjust the height to the lowest position.

Step 2

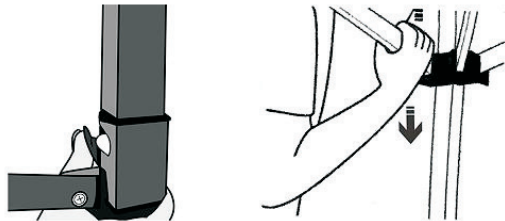

Release the four corner buttons and slide the corner bracket downwards.

Step 3

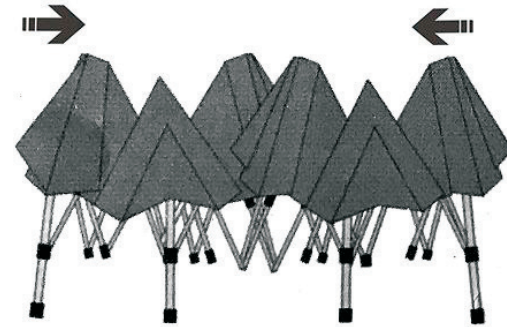

Two people stand diagonally and hold the two legs (be careful not to put your hands between the frames), and gently push inward to close them.

INSTRUCTIONS FOR INSTALLING CANOPY TENT

WARNING

Please read the instructions carefully to avoid injury before using.

IMPORTANT NOTICE:

1. The canopy tent needs two adults to set up.
2. The canopy tent is designed as a temporary shelter, and should not be left assembled outside for long period of time. It is not made for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
3. Do not set up the tent near an open flame.
4. Never use the tent in front of any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stove, lanterns, candles, or heaters) in or around your product.
5. This tent is water resistant. Keep objects from touching the inside, as objects may cause leakage at the point of contact.

